


EG

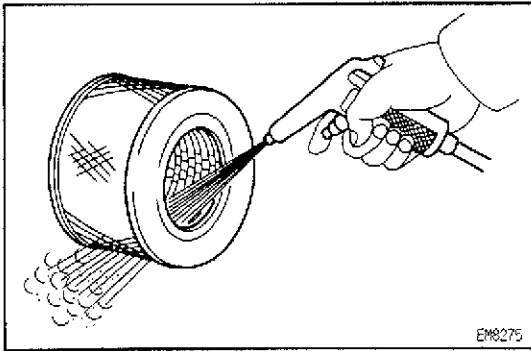

AIR FILTER INSPECTION AND CLEANING

EG34M-04

Paper Filter Type:

1. REMOVE AIR FILTER
2. INSPECT AIR FILTER


Visually check that the filter element is not excessively dirty, damaged or oily.

3. CLEAN AIR FILTER

Clean the filter element with compressed air.

First blow from the inside thoroughly. Then blow off the outside of the filter element.

4. REINSTALL AIR FILTER

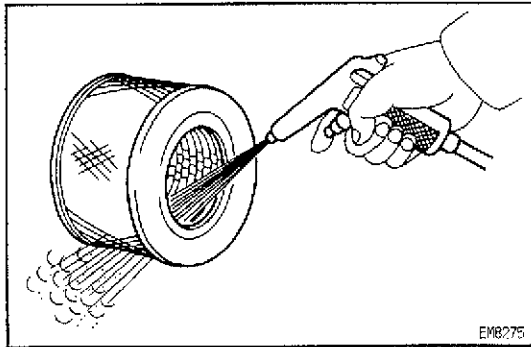

Washable Type:

1. REMOVE AIR FILTER
2. INSPECT AIR FILTER


Visually check that the filter element is not excessively dirty, damaged or oily.

3. CLEAN AIR FILTER

- (a) Blow dirt off in the filter element with compressed air.

- (b) Submerge the filter element in the water, and agitate it up and down more than 10 times.

- (c) Repeat rinsing in clean water until rinsing water is clear.

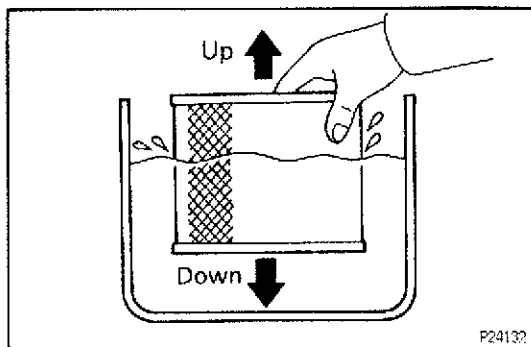

- (d) Remove excess water by shaking the filter element or blowing with compressed air.

NOTICE: Do not beat or drop filter element.

- (e) Wipe off dust on the air cleaner case interior.

4. REINSTALL AIR FILTER

