




Recommended Viscosity (SAE) :

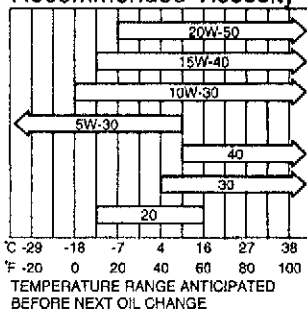


Z15527

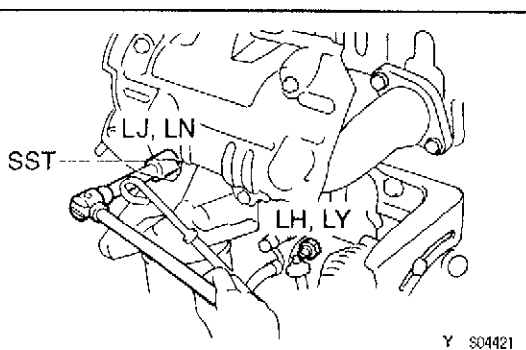

Y S04421

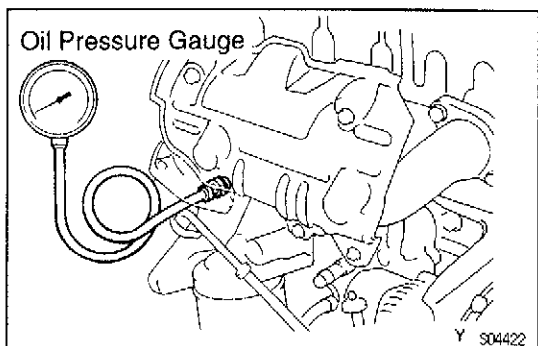

Y S04422

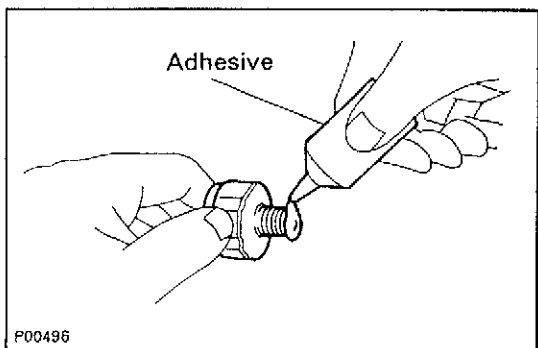

P00496

OIL PRESSURE CHECK

EG7AR-01

1. CHECK ENGINE OIL QUALITY

Check the oil for deterioration, entry of water, discoloring or thinning.

If the quality is visibly poor, replace the oil.

Oil grade:

API grade CD

(You may also use API CE or API CF)

Recommended viscosity:

Refer to illustration

2. CHECK ENGINE OIL LEVEL

The oil level should be between the "L" and "F" marks on the dipstick.

If low, check for leakage and add oil up to "F" mark.

3. REMOVE OIL PRESSURE SWITCH

Using SST, remove the oil pressure switch.

SST 09816-30010

4. INSTALL OIL PRESSURE GAUGE

5. WARM UP ENGINE

Allow the engine to warm up to normal operating temperature.

6. CHECK OIL PRESSURE

Oil pressure:

At idle

29 kPa (0.3 kgf/cm², 4.3 psi) or more

At 3,000 rpm

294 — 539 kPa

(3.0 — 5.5 kgf/cm², 43 — 78 psi)

7. REMOVE OIL PRESSURE GAUGE

8. REINSTALL OIL PRESSURE SWITCH

- (a) Apply adhesive to 2 or 3 threads of the oil pressure switch.

Adhesive:

Part No. 08833-00080, THREE BOND 1344,

LOCTITE 242 or equivalent

- (b) Using SST, install the oil pressure switch.

SST 09816-30010

Torque: 15 N·m (150 kgf·cm, 11 ft·lbf)

9. START ENGINE AND CHECK FOR OIL LEAKS